




Nerf Dart Tag Swarmfire Trigger Spring Replacement

This guide is to help the user disassemble the Nerf gun and replace a damaged or worn trigger spring.

Written By: Ashely Janae Wodall

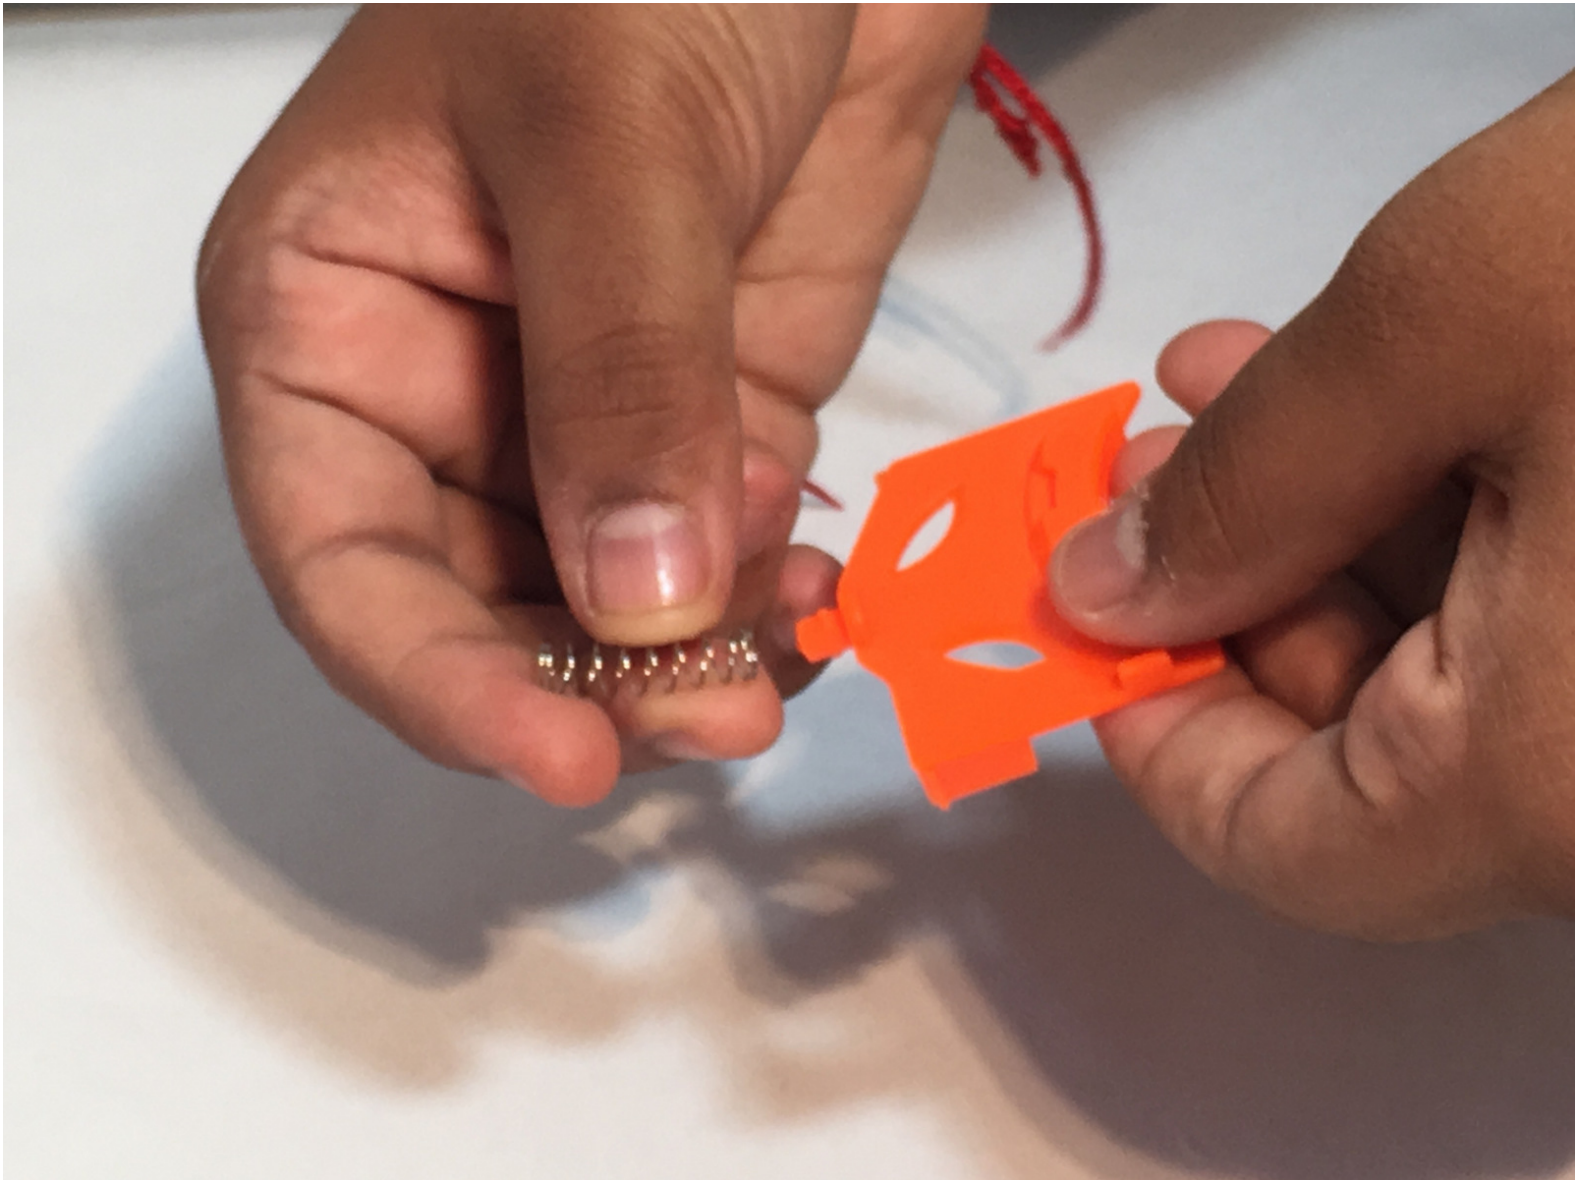

INTRODUCTION



In this guide, you will be able to easily find and replace the trigger spring for the Nerf Dart Tag Swarmfire.



TOOLS:

- [J1 Screwdriver Bit](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Trigger Spring

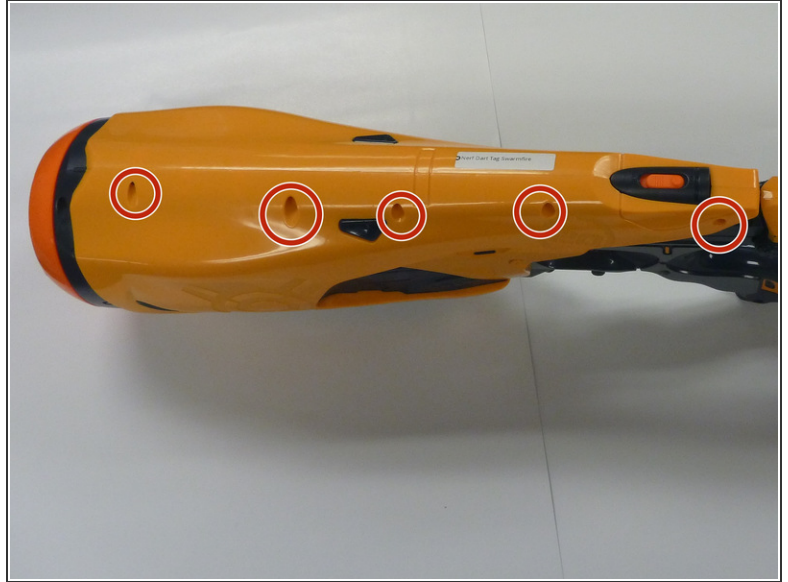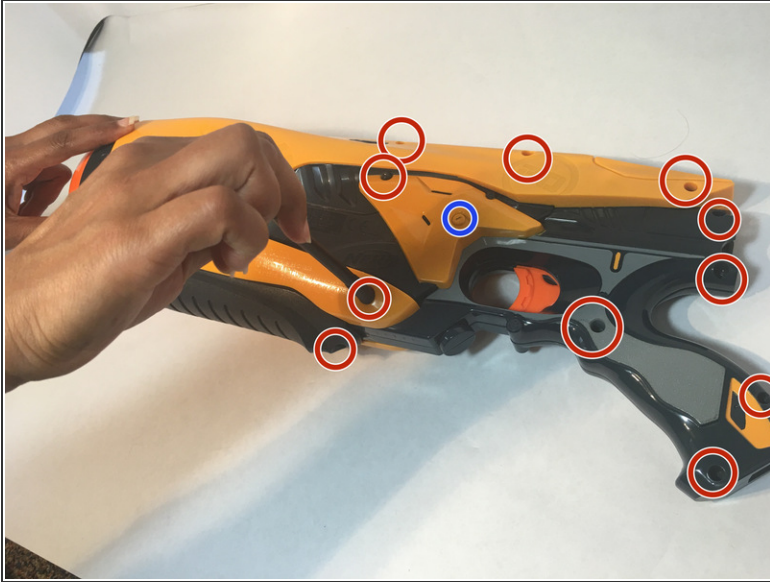


- Place the Nerf gun on its side and loosen all nine screws so the device can be opened.
- Avoid the fake plastic screw, which is merely decorative.

Step 2




- Remove the yellow and blue plastic covers from the Nerf gun to display the Nerf gun's motherboards and motor.

Step 3

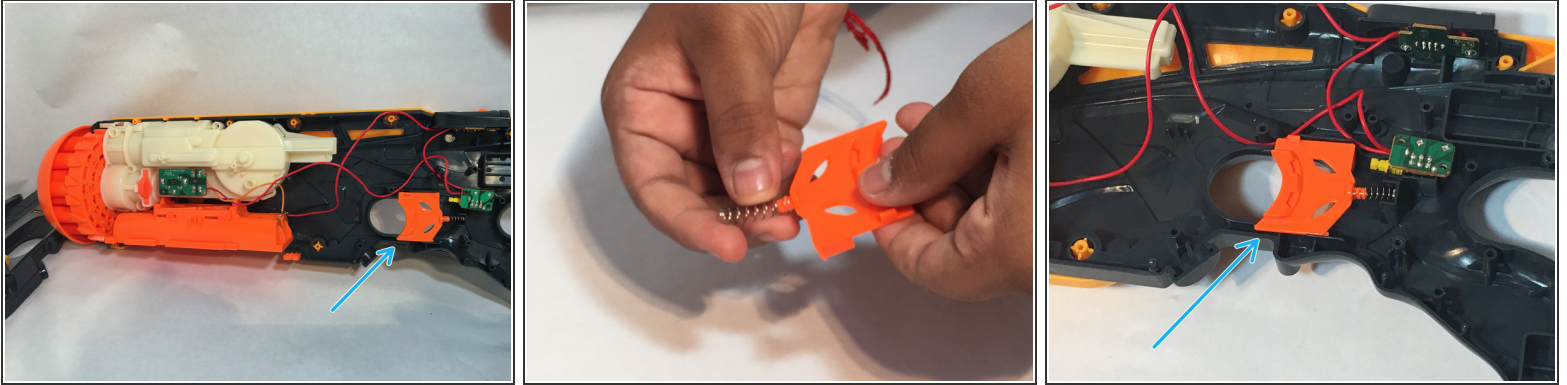


- Locate the orange trigger (dark blue if it's the newer version).
 - Slide trigger out of place and check the spring.
- ⚠ It's important to check the spring for damage before removing the spring to prevent injuries.

Step 4

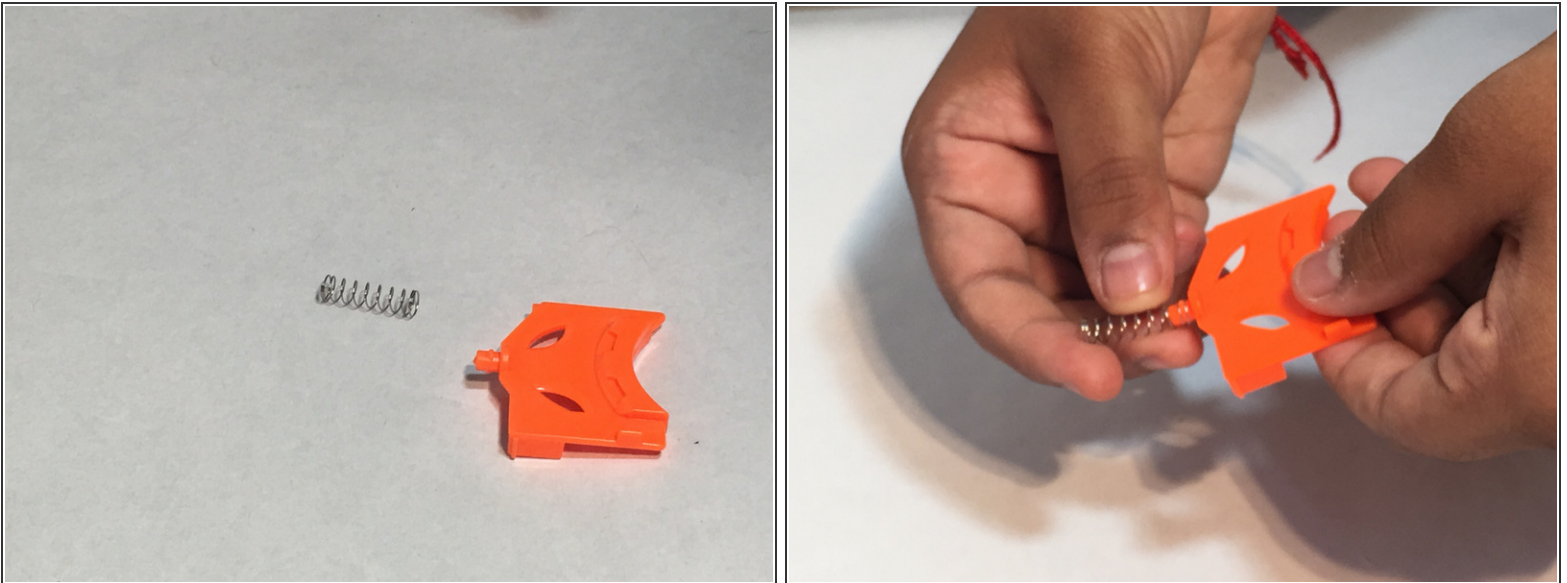

- If it is damaged, pull the spring off the trigger.
- Push the new trigger spring onto the trigger
- Make sure the trigger catches the small trigger notch so it doesn't fall off

Step 5

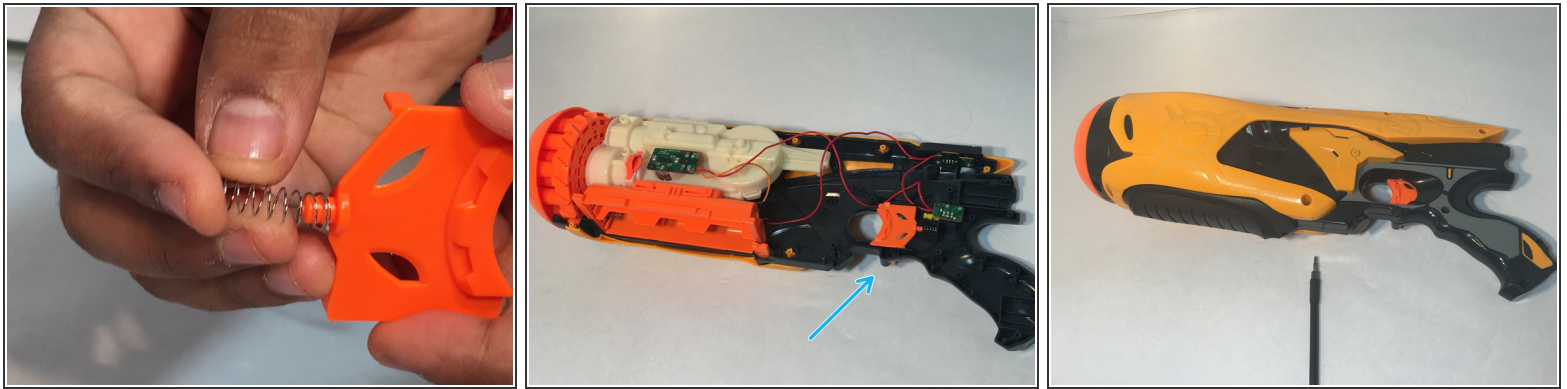

- Put the trigger back into place with the trigger spring pressed into the small compartment.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 04:03:04 PM.